
 


 







 



Figure 5: GXP16xx Front View (GXP162x as example)

Table 9: GXP1610/GXP1615/GXP1620/GXP1625/GXP1628/GXP1630 Front View Definitions

LINE Key	<p>Switch between line 1 and line 2.</p> <p>Solid Green: Calling, Talking.</p> <p>Flash Green: Call on hold.</p> <p>Flash Red: Incoming call.</p>
Softkeys	<p>The softkeys are context sensitive and will change depending on the status of the phone.</p>
	<p>Messages.</p> <p>Press to view messages.</p>
	<p>Phonebook.</p> <p>Press to view Contacts.</p>

	Home. Press to go to idle screen, when stay in submenu.
	Page/Intercom. If the intercom number has set, call this number directly. If the intercom number has not set, press this key will have no effect.
	Hold. Place active call on hold, or resume the call on hold.
	Record. Press to enable/disable record feature in an active call or on conference.
Standard Keypad	To dial phone numbers. Press numeric keys "0-9" to enter phone numbers. Press "*" to enter voice menu or input special characters, or long press it to lock the keypad. Press "#" to dial out numbers or input special characters.
	Navigation Keys. <u>When entered the menu:</u> Press the UP/DOWN keys to scroll through menu options. Press the LEFT key to go back to the previous menu. The RIGHT key has no function. <u>In Idle:</u> Press the UP key to view missed calls. Press the DOWN key to view dialed calls. Press the RIGHT key to view answered calls.
	Menu/OK Key. <u>In Idle:</u> Press to enter the main menu. Confirm the current selection or the inputted info. <u>Off hook:</u> Switch between outgoing call and paging call.
	Mute. To mute/unmute an active call. <u>When DND is on:</u> Enable/disable DND when the phone is in idle.
	Headset. Press to switch between headset and handset mode in an active call.

	Transfer. Transfer an active call to another number.
	Conference. Establish 3-way conference with other 2 parties.
	Send. <u>Send.</u> Enter the digits and then press Send to dial out. <u>Redial.</u> Redial when there is a previously dialed call.
	Speaker. Press to switch between speaker and handset mode in an active call.
Message Waiting Indicator	Message Waiting Indicator. The LED Indicator will flash in red when there is new voice mail.